



HYPERONE

71-401

HYPERFIVE

71-405



Owner's Manual

Stainout System
992 Rancheros Dr. #A
San Marcos, Ca. 92069

When the machine is delivered

Check the carton and machine carefully for signs of rough handling. If the unit is damaged, notify the carrier immediately and request an inspection. Be sure to keep the carton, packing inserts, packing list and carrier's receipt until the inspector has verified your claim.

General Precautions

Make sure the machine is plugged into an electrical outlet with the same voltage as shown on the unit.

Warning

This extractor was designed for use on carpet, floor, and upholstery applications as per instructions and recommendations written in this manual. Any deviation from its proper use or purpose and the consequential damage that may occur is the sole responsibility of the end user.

Do not use volatile substances such as gasoline, kerosene, or any petroleum based solvent in the machine or anywhere near the cleaning area. The use and presence of such materials could cause an explosion and fire.

Do not expose machine to extreme temperatures.

Do not attempt repair of machine, contact Stainout System.

Not for use on standing water.

Do not use unauthorized replacement parts.

This extractor was tested before shipping, in some cases some water or anti freeze might remain in the plumbing system, we suggest flushing it out before using it. Make sure to use anti freeze for storage if you are located in areas prone to extreme cold.

Working with an internal inline heater

Before turning on heater power, make sure to connect solution hose and desired tool. Fill solution tank with water and turn your machine pump on. Make certain to bleed air out of system before use. To check that all air is out of heater, open trigger valve and spray until clear. Turn heater switch on and wait approximately 3-4 minutes to heat up.



WARNING Keep tank clean and do not use any flammable products.

Step 1: connect all fittings, vacuum hose & solution hose from machine to desired tool

Step 2: Fill solution tank with water

Step 3: turn on pump switch  I. and bleed air out of system before next step

Step 4: turn on heater  II. Wait a few minutes for heater to get hot.

Step 5: turn on vacuum switch  III. Begin extracting.

STAINOUT SYSTEM LIMITED WARRANTY

THE PRODUCTS SOLD BY STAINOUT SYSTEM ARE NOT DESIGNED OR INTENDED FOR PERSONAL, FAMILY OR HOUSEHOLD USE. The capacity, output, and other features of products sold by Stainout System are designed specifically for commercial, industrial or institutional use by adult persons knowledgeable of the proper application and operation of the products. If used improperly in a domestic or household setting, a failure to operate at appropriate power levels or to properly serve the energy requirements of a product may cause damage to the product. Many of the products use water and/or solutions in conjunction with heat and/or pressure which, if misapplied or improperly used, can damage the product itself, or the operator. Because Stainout System does not warrant any product that evidences misapplication, abuse, negligence in use or care, or abnormal use, you are advised not to use these products without appropriate training or operational knowledge.

90-DAY WEAR PARTS LIMITED WARRANTY

Stainout System will replace all wear parts for 90 days from the date of original purchase of new equipment. Wear parts are items which wear out as a result of usage or the passage of time and are consumed despite attempts to maintain them, such as gaskets, wheels, brass, cords, wires, electrical terminals, hoses, switches, filters, bearings, O-rings, or other parts deemed wear items in Stainout System's sole discretion. This warranty covers the cost of replacement only and does not cover shipping or labor costs.

1-YEAR MAJOR COMPONENTS WARRANTY

Stainout System warrants that major components such as pumps and batteries are covered for a One (1) year limited warranty from the date of original purchase, on new equipment. This warranty does not apply and is void if there is water damage, freezing, chemical build-up, chemical damage, or evidence of abuse, neglect or tampering. This warranty covers the cost of replacement only, and does not cover shipping or labor costs. This warranty only applies to defects in workmanship and materials as determined by the manufacturer and covers the cost of replacement and labor by a Stainout System authorized distributor.

scan to view full warranty

SAFETY INSTRUCTIONS

Read All Instructions Before Using This Extractor


When using an electrical appliance, basic precautions should always be followed.

WARNING - To reduce risk of fire, electric shock or injury:


1. Do not leave appliance plugged in. Unplug from outlet when not in use and before servicing.
2. **WARNING: ELECTRIC SHOCK COULD OCCUR IF USED OUTDOORS OR ON WET SURFACES.**
3. Do not allow to be used as a toy. Close attention is necessary when used by or near children.
4. Use only as described in this manual. Use only manufacturer's recommended parts.
5. Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors or dropped into water, follow warranty instructions and contact an approved service center.
6. Do not pull or carry by cord, do not use cord as a handle, do not close a door on cord, or do not pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
7. Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
8. Do not handle plug or appliance with wet hands.
9. Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint hair, and anything that may reduce air flow.
10. Keep hair, loose clothing, fingers and all parts of body away from openings and moving parts.
11. Do not pick up anything that is burning or smoldering, such as cigarettes, matches or hot ashes.
12. Do not use without filters in place.
13. Turn off all controls before unplugging.
14. Use extra care when cleaning on stairs.
15. Always wear safety equipment and appropriate clothing when operating extractor to protect from hot water.
16. Do not use to pick up flammable or combustible liquids such as gasoline or use in areas where they may be present.
17. Connect to a properly grounded outlet only.
18. Do not attempt to service the unit while appliance is plugged in.

GENERAL OPERATING INSTRUCTIONS

4

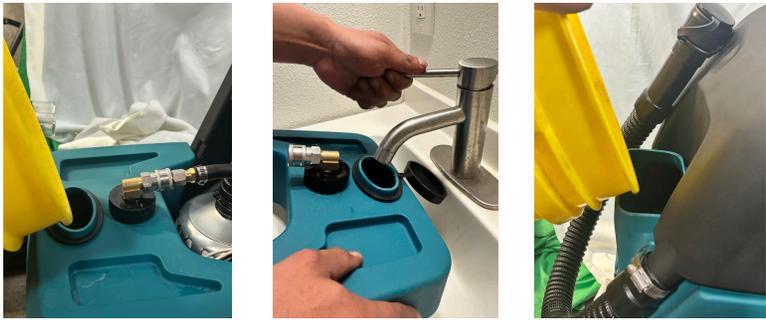

5

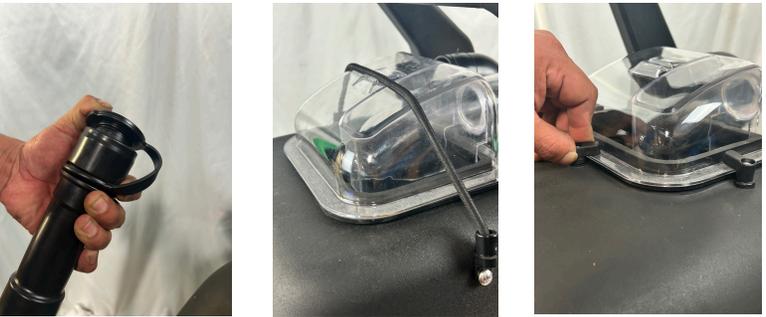

6



9



ASSEMBLY

1. Connect the vacuum hose to vacuum intake connection on the machine and the wand or upholstery tool. Also connect the solution hose to the quick connect on the machine and the quick connect on the wand or hand tool.
2. To protect the grounding plug; this plug is to be used only with proper grounding type (three prong) receptacle. Do not break off or pull out the grounding blade.

PREVENTATIVE MAINTENANCE

1. Thoroughly clean all equipment and accessories after each use.
A: Rinse solution and vacuum tank with clean water. B: Flush entire solution system with clean water. This includes all solution hoses and wands. Do not allow liquid with cleaning chemicals to remain in the equipment.
2. Occasionally, lubricate all quick connects (every 3 months).
Rinse solution and vacuum tank with clean water
3. Do not use the same pail to fill the solution tank that is used to empty the waste tank. This would result in putting dirt and debris into the solution lines that can block filters, orifices, and generally degrade solution line systems.
4. Keep equipment out of extreme temperatures (i.e. freezing temperatures will make water expand, and will damage pump, fittings, valves, etc.).
5. Turn off the machine when not in use. Especially, walking away from the machine and not using it for a while may build up pressure in the machine or heater. This can cause excessive pressure that is not good for the machine.
6. Check for loose or frayed wires.
7. Rinse clean and dry vacuum. Recommended replace vacuum filter every 30-60 days
8. Weekly run a descaler through the pump & heater system to keep internal line clean from mineral deposits

GENERAL OPERATING GUIDELINES

Read the manual carefully and completely before attempting to operate the unit. Make sure the unit is plugged into an electrical outlet with the same voltage as shown on the unit.

1. Always thoroughly pre vacuum the surface to be cleaned using an upright vacuum cleaner.
2. Pre-vacuum the area to be cleaned with a dry vacuum cleaner or upright vacuum.
3. Recommended method of getting chemical to the floor is to pre spray the cleaning area using the G3 or Penguin sprayer. This will give it dwell time to do its job, and result in a much cleaner floor.
4. We do not recommend putting chemical in machine tank. Fill solution tank with clean water (use cool water for wool).
5. Make sure drain valve is closed on the Hyper Five and recovery tank lid is closed before turning on vacuum and pump switches (if left open, there will be no suction).
6. Connect vacuum and solution hose to unit.
7. In case foam is detected in recovery tank and hose, **use defoamer** to prevent from damaging the vacuum motors.
8. Continue cleaning until the clean water tank is empty and/or recovery tank is full (or until cleaning job is done). Turn off all the switches and disconnect power cord from power plug, then empty the recovery tank into bucket or other proper drain area.
9. The vacuum filter (wet filter) should be rinsed and cleaned thoroughly when its still wet. Wrap power cords around handle for storage. Do not use solution or recovery tanks for storage, machine can be damaged.